


CONSEW

328RB-2

针杆离合综合送料平缝机

零件样本


A. 机壳部件

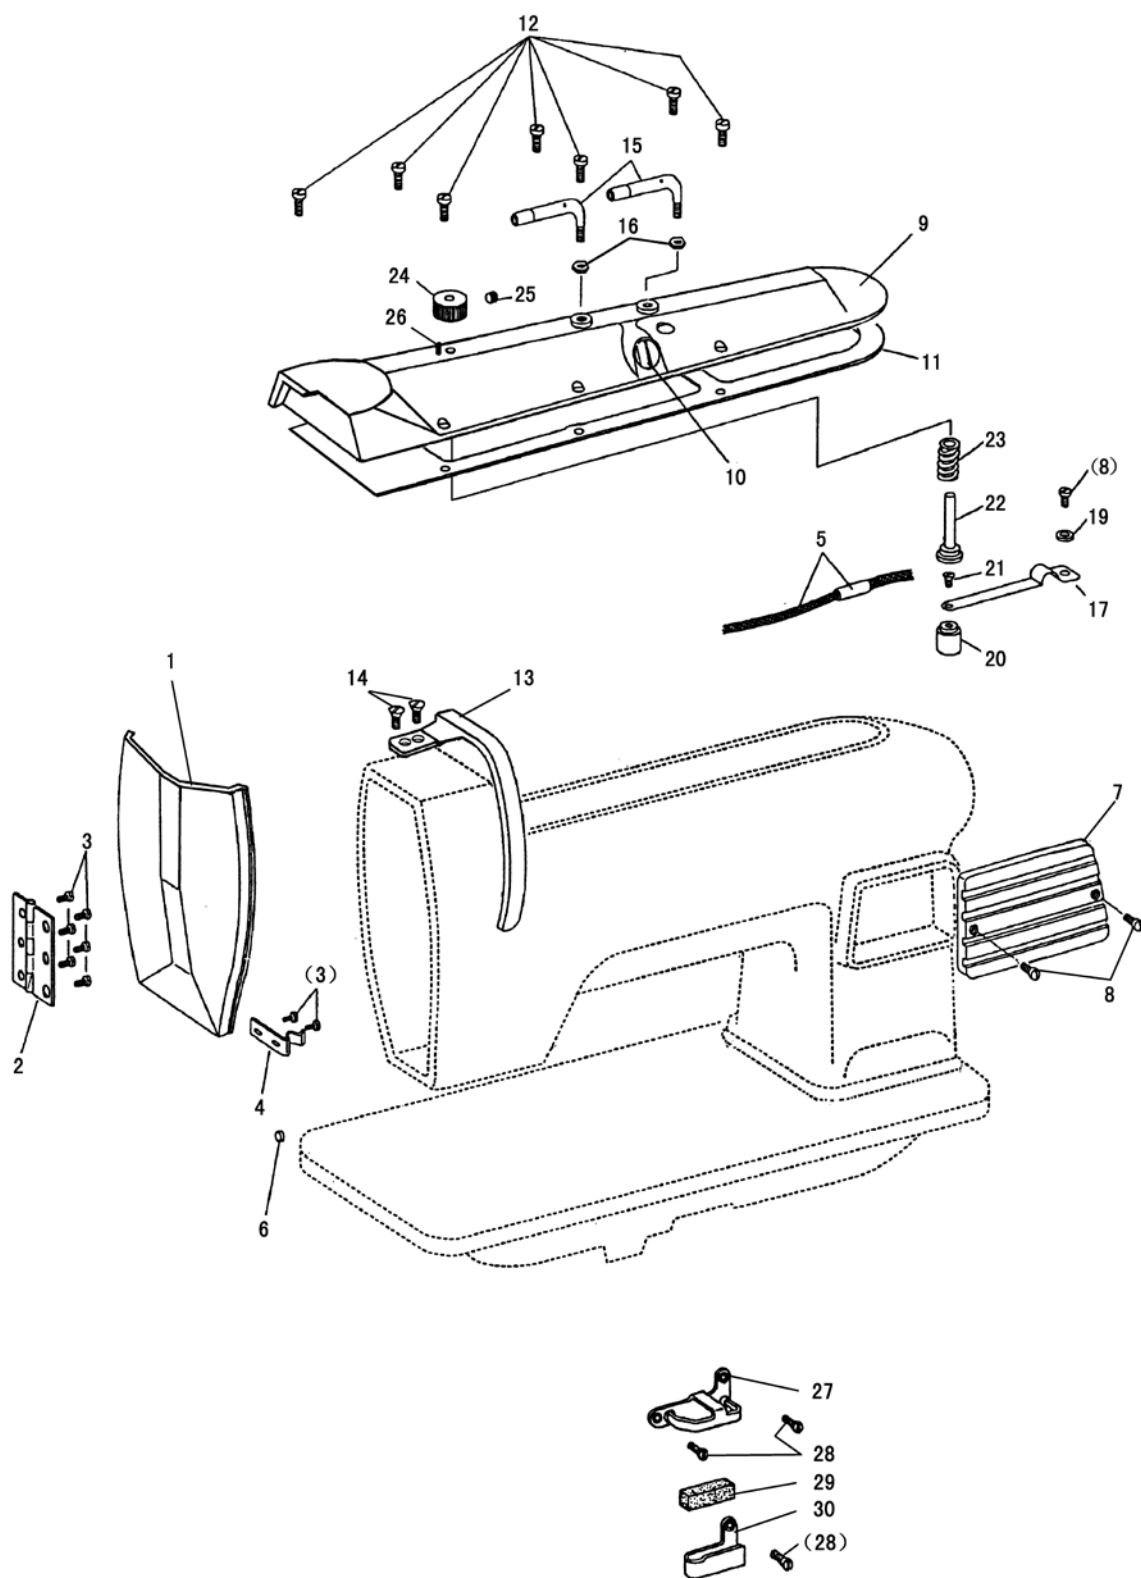

A. 机壳部件

序号	图 号	名 称	件数	备 注
A01	HE511B8001	面板	1	
A02	HE009B7101	铰链	1	
A03	H5727B8001	螺钉	8	SM1/8(44)×3.5
A04	HE010B8001	面板簧	1	黑色
A05	HE030B7101	油线组件	1	
A06	HE011B8001	面板橡皮塞	1	
A07	HE012B8001	横盖板	1	
A08	HE013B8001	横盖板螺钉	3	SM9/64(40)×8 镀镍
A09	HE512B8001	上盖板	1	
A10	HE035B8001	油量观察窗	1	
A11	HE016B8001	上盖板密封垫	1	
A12	HE017B8001	上盖板螺钉	7	SM9/64(40)×10 镀镍
A13	HE513B8001	挑线杆防护罩	1	
A14	HE111F8001	挑线杆防护罩螺钉	2	SM1/8(44)×7 镀铬
A15	HE020B8001	上盖板线勾	2	镀铬
A16	HE021B8001	线勾螺母	2	SM7/32(32) 镀镍
A17	HE022B8001	油量调节弹簧	1	黑色
A19	H005004040	小垫圈	1	镀镍
A20	HE024B8001	振动块	1	
A21	HE025B8001	振动块螺钉	1	SM1/8(40)×3.3
A22	HE026B8001	油量调节器销	1	
A23	HE027B8001	供油开关弹簧	1	
A24	HE028B8001	油量调节器	1	黑色
A25	HE029B8001	油量调节器螺钉	1	SM15/64(28)×7.5
A26	HE037B8001	防转销	1	
A27	HE031B8001	过线器（上）	1	镀铬
A28	HE032B8001	过线器螺钉	3	SM0.1339(3.4)(36)×6.5
A29	H3108B0692	羊毛毡	1	
A30	HE033B8001	过线器（下）	1	镀铬


B. 上轴部件

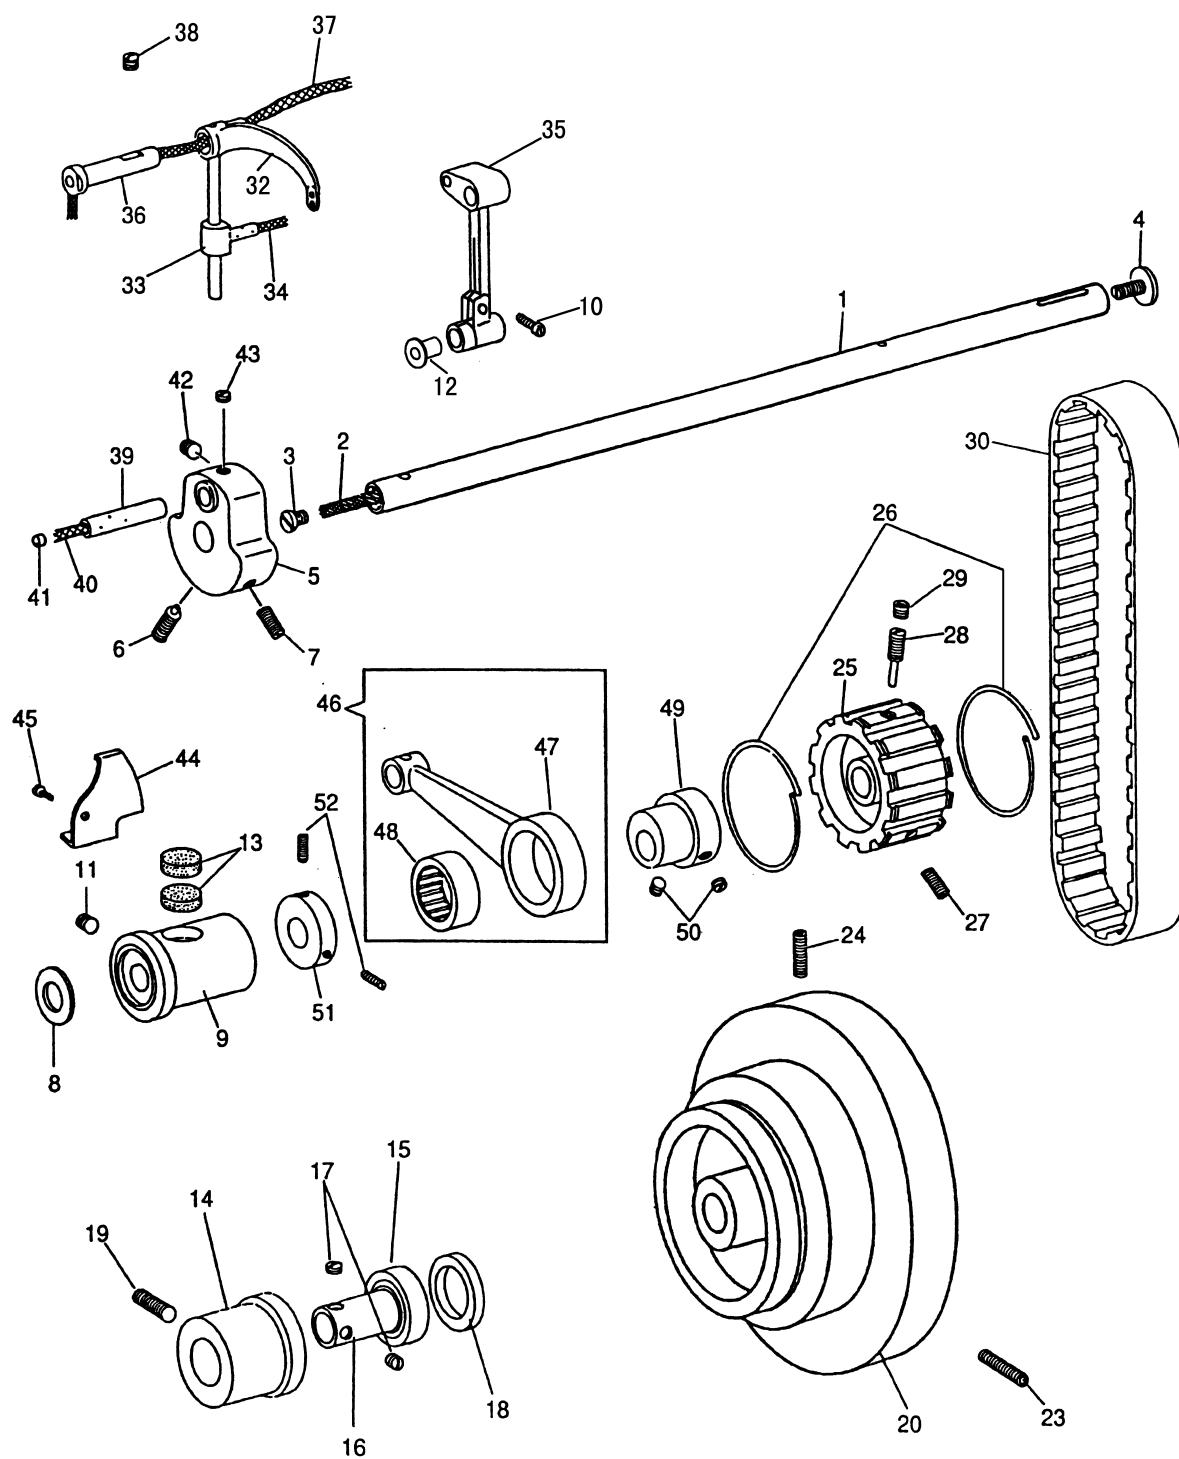

B. 上轴部件

序号	图 号	名 称	件数	备 注
B01	HE004C8001	上轴	1	
B02	HE005C8001	上轴油绳	1	
B03	HE006C8001	上轴封油螺钉	1	SM0. 3091 (7. 85) (20) × 6
B04	HE007C8001	上轮调节螺钉	1	SM17/64 (6. 75) (24) × 11
B05	HE504C8001	针杆曲柄	1	
B06	HE009C8001	针杆曲柄定位螺钉	1	SM1/4 (28) × 20
B07	HE010C8001	针杆曲柄螺钉	1	SM1/4 (28) × 14
B08	HE011C8001	上轴轴套垫圈	1	
B09	HE012C8001	上轴轴套(左)	1	
B10	H3409C0673	圆柱头螺钉	1	
B11	HE013C8001	上轴轴套(左)紧定螺钉	1	SM17/64 (6. 75) (24) × 6. 5
B12	H3409C0672	套筒	1	
B13	HE014C8001	上轴左轴套羊毛毡	2	
B14	HE015C8001	上轴轴承座	1	
B15	HE016C8001	上轴轴承	1	相等于 NSK 6202Z
B16	HE017C8001	上轴轴套(右)	1	
B17	HE044C8001	螺钉	2	SM1/4 (28) × 4. 5
B18	HE019C8001	轴承挡圈	1	
B19	HE020C8001	上轴轴承座紧定螺钉	1	SM17/64 (6. 75) (24) × 20
B20	HE021C8001	主动轮	1	
B23	HE024C8001	主动轮定位螺钉	1	SM15/64 (28) × 21
B24	HE025C8001	主动轮紧定螺钉	1	SM15/64 (28) × 20
B25	HE026C8001	同步带轮(上)	1	进口
B26	H3205C0661	弹簧挡圈	2	
B27	HE028C8001	同步带轮螺钉	1	SM17/64 (6. 75) (24) × 20内六角
B28	HE029C8001	长定位螺钉	1	SM17/64 (6. 75) (24) × 14. 5
B29	HE030C8001	止动螺钉	1	SM17/64 (6. 75) (24) × 6. 5内六角
B30	HE031C8001	同步带	1	SEIKO 21E0 022 (进口)
B32	HE510C8001	挑线杆	1	
B33	HE512C8001	滑杆	1	
B34	HE035C8001	油绳	1	
B35	HE511C8001	针杆挑线连杆	1	
B36	HE515C8001	挑线杆铰链轴	1	
B37	HE038C8001	油线	1	
B39	HE513C8001	挑线连杆铰链轴	1	
B40	HE041C8001	油线	1	
B41	HE011B8001	面板橡皮塞	1	
B42	HE043C8001	螺钉 (长)	1	SM1/4 (28) × 6. 5
B43	HE044C8001	螺钉 (短)	1	SM1/4 (28) × 4. 5
B44	HE045C8001	挡油板	1	
B45	HE046C8001	档油板螺钉	1	SM0. 1339 (3. 4) (36) × 6
B47	HE048C8001	偏心轮连杆	1	
B48	HE049C8001	轴承	1	NTN SCE 168A
B49	HE050C8001	压脚提升偏心轮	1	
B50	HE051C8001	压脚提升偏心轮螺钉	2	SM1/4 (40) × 5. 5
B51	HE052C8001	挡圈	1	
B52	HE053C8001	螺钉	2	SM7/32 (32) × 11


C. 压脚部件

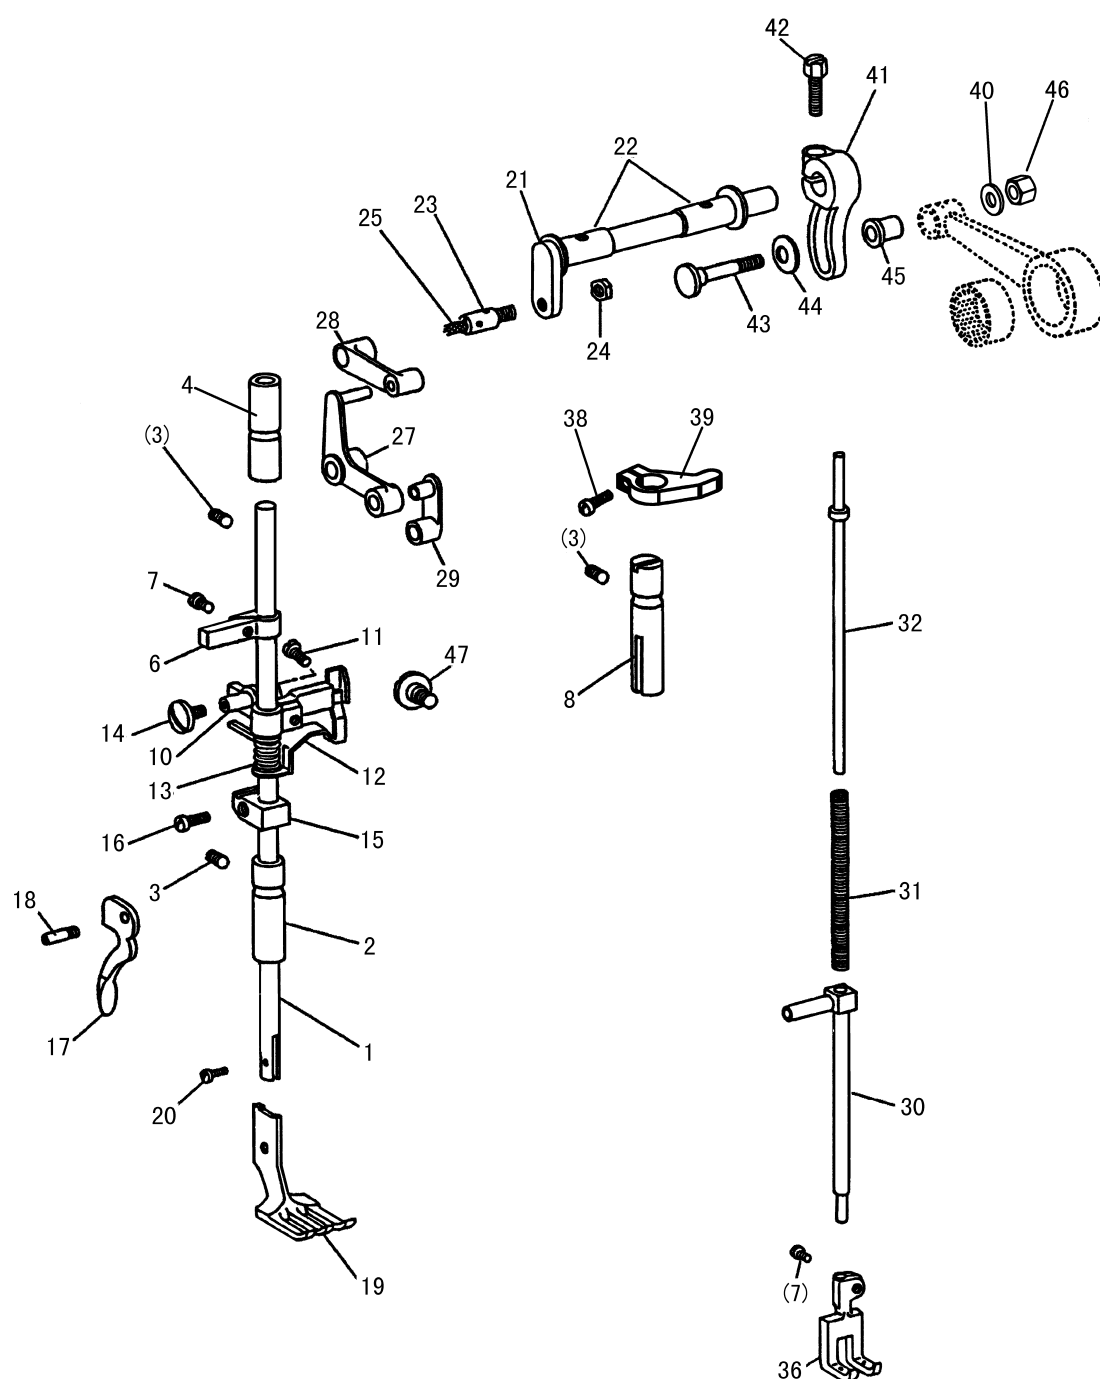

C. 压脚部件

序号	图 号	名 称	件数	备 注
C01	HE004D8001	压紧杆	1	SM17/64(6.75)(24)×11
C02	HE005D8001	压紧杆下轴套	1	
C03	HE006D8001	压紧杆轴套螺钉	3	
C04	HE509D8001	压紧杆上轴套	1	
C06	HE008D8001	压紧杆导架	1	SM5/32(40)×6.5
C07	HE009D8001	导架螺钉	2	
C08	H3100G2020	压紧杆导柱	1	SM11/64(40)×14
C10	H3107G0663	压紧杆提升架	1	
C11	H3107G0661	提升架紧定螺钉	1	
C12	H3109G0651	松线驱动板	1	
C13	H3100G2050	松线凸轮簧	1	SM11/64(40)×8
C14	H3107G0662	杠杆轴控螺钉	1	
C15	HE017D8001	压紧杆弹簧架	1	M4×0.7×9
C16	HE018D8001	压杆簧架螺钉	1	
C17	H3100G2070	压脚扳手	1	标准
C18	HE020D8001	压脚扳手螺钉	1	
C19	HE021D8001	外压脚(1/4)	1	SM0.1339(3.4)(36)×9
C20	HE022D8001	外压脚螺钉	1	
C21	H3112F0663	压脚提升曲柄轴	1	SM1/4(28)
C22	HE024D8001	压脚提升曲柄轴套	2	
C23	HE025D8001	压脚提升曲柄轴调节螺钉	1	31H5-002追加加工
C24	H3112F0662	曲柄轴螺母	1	
C25	HE035C8001	油线	1	
C27	HE513D8001	压脚提升杠杆	1	
C28	H3100F2010	曲柄连杆	1	31H5-003追加加工
C29	HE514D8001	杠杆连杆	1	
C30	HE505D8001	内压紧杆	1	标准
C31	H3100F2060	内压脚压簧	1	
C32	HE506D7101	压簧顶杆组件	1	
C36	HE037D8001	内压脚(1/4)	1	
C38	HE512D8001	定位曲柄螺钉	1	SM1/4(28)×16
C39	HE507D8001	内压紧杆定位曲柄	1	
C40	H4728H8001	垫圈	1	
C41	H3115F0672	调节曲柄	1	
C42	H3115F0671	调节曲柄螺钉	1	SM7/32(32)
C43	H3100F2130	连杆铰链轴	1	
C44	HE045D8001	垫圈	1	SM17/64(6.75)(24)×16.5
C45	H3100F2150	连杆铰链轴套	1	
C46	H3119F8001	连杆铰链轴螺母	1	
C47	HE048D8001	导向螺钉	1	

D. 针杆支架部件

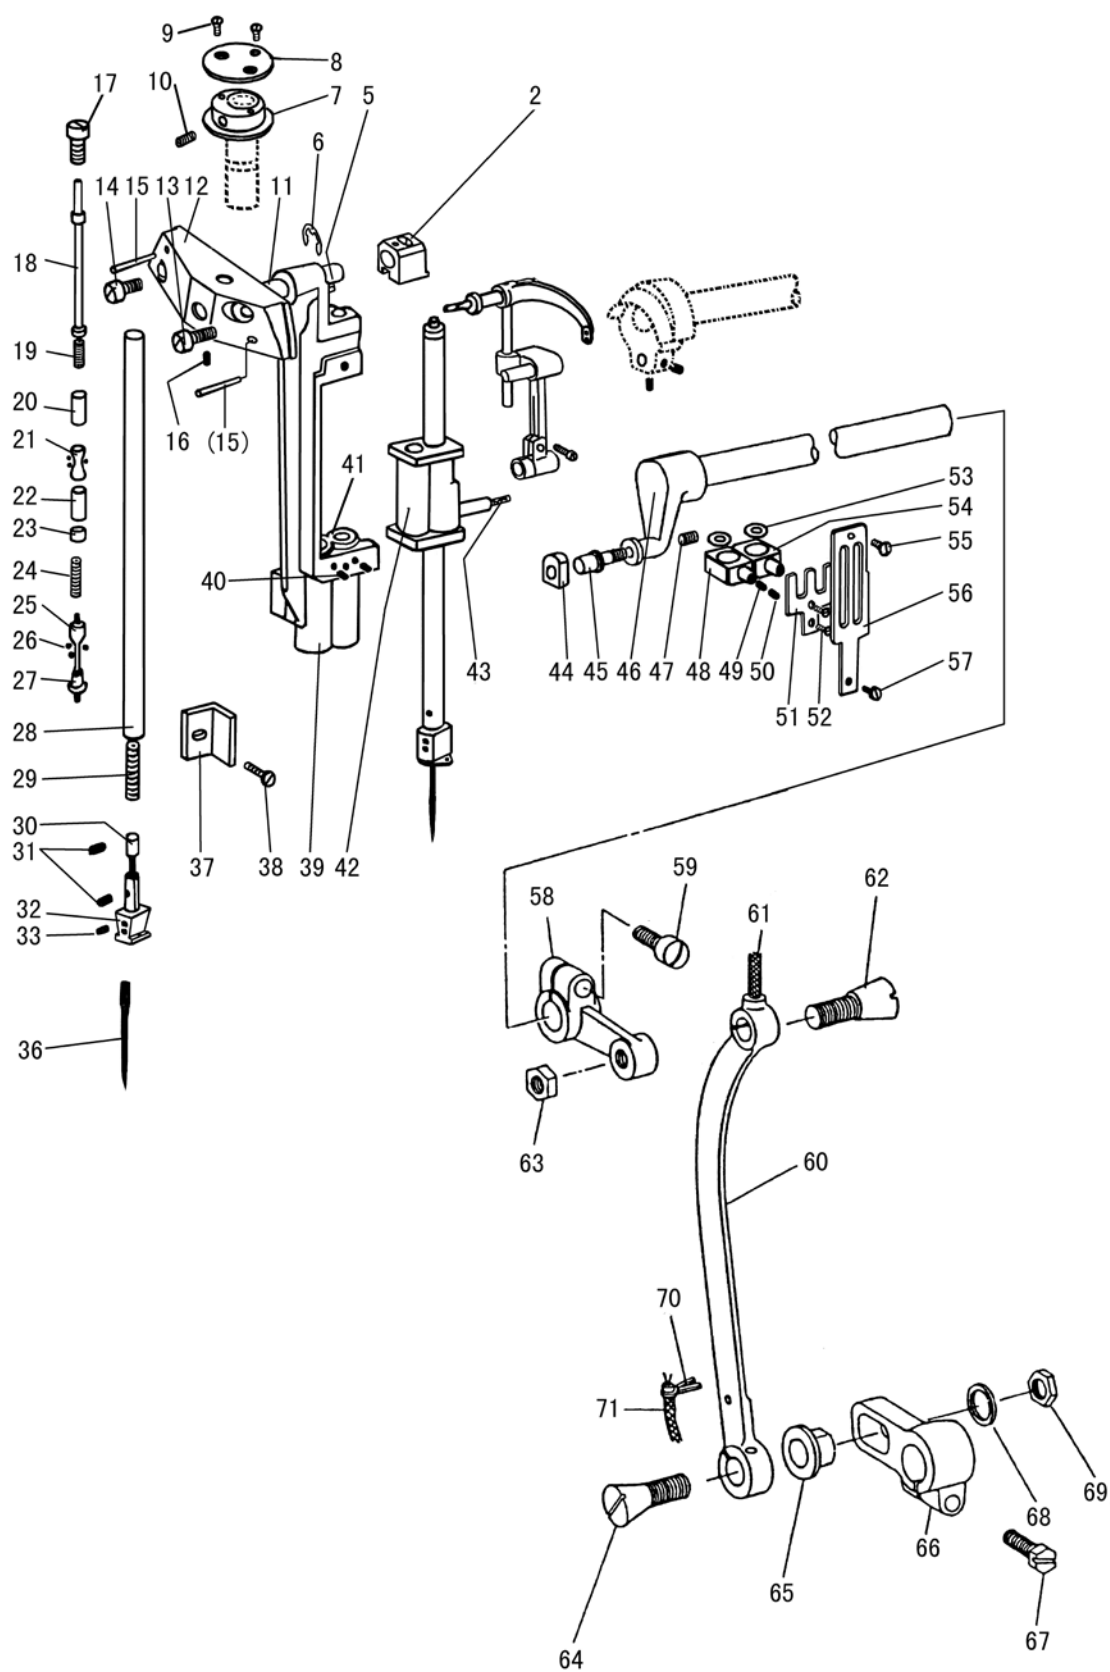


D. 针杆支架部件

序号	图 号	名 称	件数	备 注
D02	HE508E8001	变换曲柄	1	
D05	H609030220	弹性圆柱销	1	GB/T879.1 3×22
D06	H007013070	开口挡圈	1	GB/T896 7
D07	HE510D8001	偏心轮	1	
D08	HE511D8001	偏心轮上盖板	1	
D09	HE106F8001	偏心轮上盖板螺钉	2	SM1/8 “×44 L=7.5
D10	H3210F0681	偏心轮螺钉	1	M5×0.8×5
D11	HE513E8001	支架套筒轴	1	
D12	HE512E8001	变换曲柄轴支架	1	
D13	HE515E8001	曲柄支架安装长螺钉	1	SM3/16×32×17
D14	HE514E8001	曲柄支架安装螺钉	1	SM3/16×32×10
D15	H602030200	圆锥销	2	GB/T117 3×20
D16	H7310F8001	紧定螺钉	1	M5×0.8×5
D17	H34412C810	特殊螺钉	1	M5.5×0.5×8.5
D18	H34412C510	阶梯销	1	
D19	H34412C110	弹簧	1	
D20	H34412C210	套筒	1	
D21	H34412C310	特殊销	1	
D22	H3410C1261	5/64×6特殊螺母	1	
D23	H3410C1262	5/64×2六角螺母	1	
D24	H3410C1265	弹簧	1	
D25	H3410C1263	滚筒	1	
D26	H3410C301I	钢球	6	S Φ 2.5
D27	H3410C1264	5/64×8三角销螺杆	1	
D28	H34411C210	针杆	2	
D29	H34412C410	弹簧	1	
D30	H34412C910	止动块	1	
D31	H34412C710	紧定螺钉	4	SM1/8(44)×6
D32	HH810F8001	机针夹头(1/4")	2	标准
D33	H32481B521	紧定螺钉	2	SM1/8(44)×3.5
D36		机针	2	DP×17 #22
D37	H3100F2240	针杆摆动架压板	1	
D38	HE012E8001	螺钉	1	SM11/64(32)×6.5
D39	HE505E8001	针杆支架	1	
D40	H34411C410	紧定螺钉	2	
D41	H34411C310	针杆轴套	2	
D42	H3410C3014	针杆夹头	1	
D43	H3204D6513	羊毛毡	1	
D44	H3410C301P	滑块	1	
D45	HE027E8001	摆动架滑块轴	1	
D46	HE024E8001	针杆架摆动曲柄轴	1	
D47	HE028E8001	摆动架滑块轴螺钉	1	
D48	H3410C3017	针杆夹头	1	
D49	H3410C3018	铜塞	2	
D50	H3410C3019	内六角紧定螺钉	2	

D. 针杆支架部件

序号	图 号	名 称	件数	备 注
D51	H3410C301B	支架	1	SM9/64×40×6.5
D52	H3410C301C	沉头螺钉	2	
D53	H3410C3016	垫片	4	
D54	H3410C3015	针杆夹头	1	
D55	H3410C301K	圆柱头螺钉	1	
D56	HE523E8001	导向板	1	
D57	HA7121N304	螺钉	1	
D58	HE029E8001	针杆架摆动曲柄（右）	1	
D59	HE040D8001	导向压板螺钉	1	
D60	HE031E8001	针杆摆动杆连杆	1	
D61	HE035C8001	油线	1	SM11/32(28)×26
D62	HE033E8001	曲柄连杆螺钉（小）	1	
D63	HE034E8001	螺母（小）	1	
D64	HE035E8001	曲柄连杆螺钉（大）	1	
D65	HE036E8001	调节套	1	
D66	HE037E8001	送布轴曲柄连杆	1	
D67	HE038E8001	螺钉	1	
D68	H3100E2220	垫圈	1	
D69	H7208G8001	螺母	1	
D70	H601020300	开口销	1	GB/T91 2x30
D71	HE042E8001	油绳	1	


E. 压脚拉杆部件

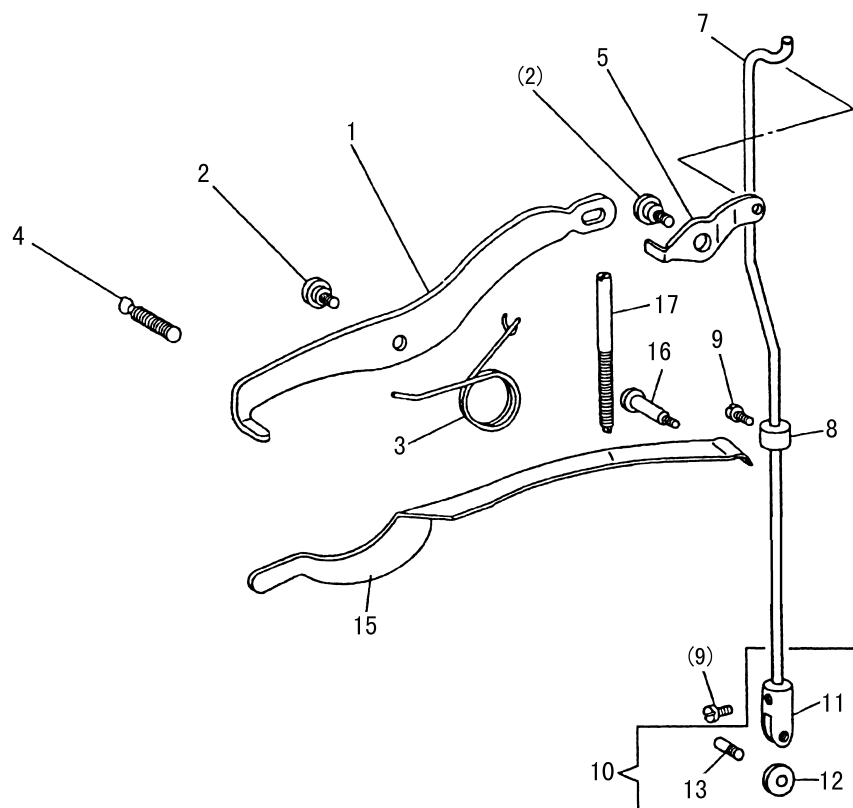

E. 压脚拉杆部件

序号	图 号	名 称	件数	备 注
E01	HE004F8001	膝控提升大杠杆	1	
E02	HE005F8001	膝控提升杠杆螺钉	2	SM17/64(24)
E03	HE006F8001	膝控提升杠杆复位弹簧	1	
E04	HE007F8001	复位弹簧螺钉	1	SM17/64(6.75)(24)
E05	HE008F8001	膝控提升杠杆	1	
E07	HE010F8001	膝控提升拉杆	1	
E08	HE012F8001	膝控提升拉杆套环	1	
E09	HE012E8001	螺钉	2	SM11/64(32)×6.5
E10	HE014F7101	膝控提升拉杆接头组件	1	装配组件
E11	HE015F8001	拉杆接头	1	
E12	HE016F8001	滚轮	1	
E13	HE017F8001	滚轮轴螺钉	1	SM0.1339(36)
E15	HE019F8001	压紧杆簧	1	
E16	HE020F8001	压簧支撑螺钉	1	SM17/64(24)
E17	HE021F8001	调压螺钉	1	SM1/4(32)×46

F. 下轴、送料部件

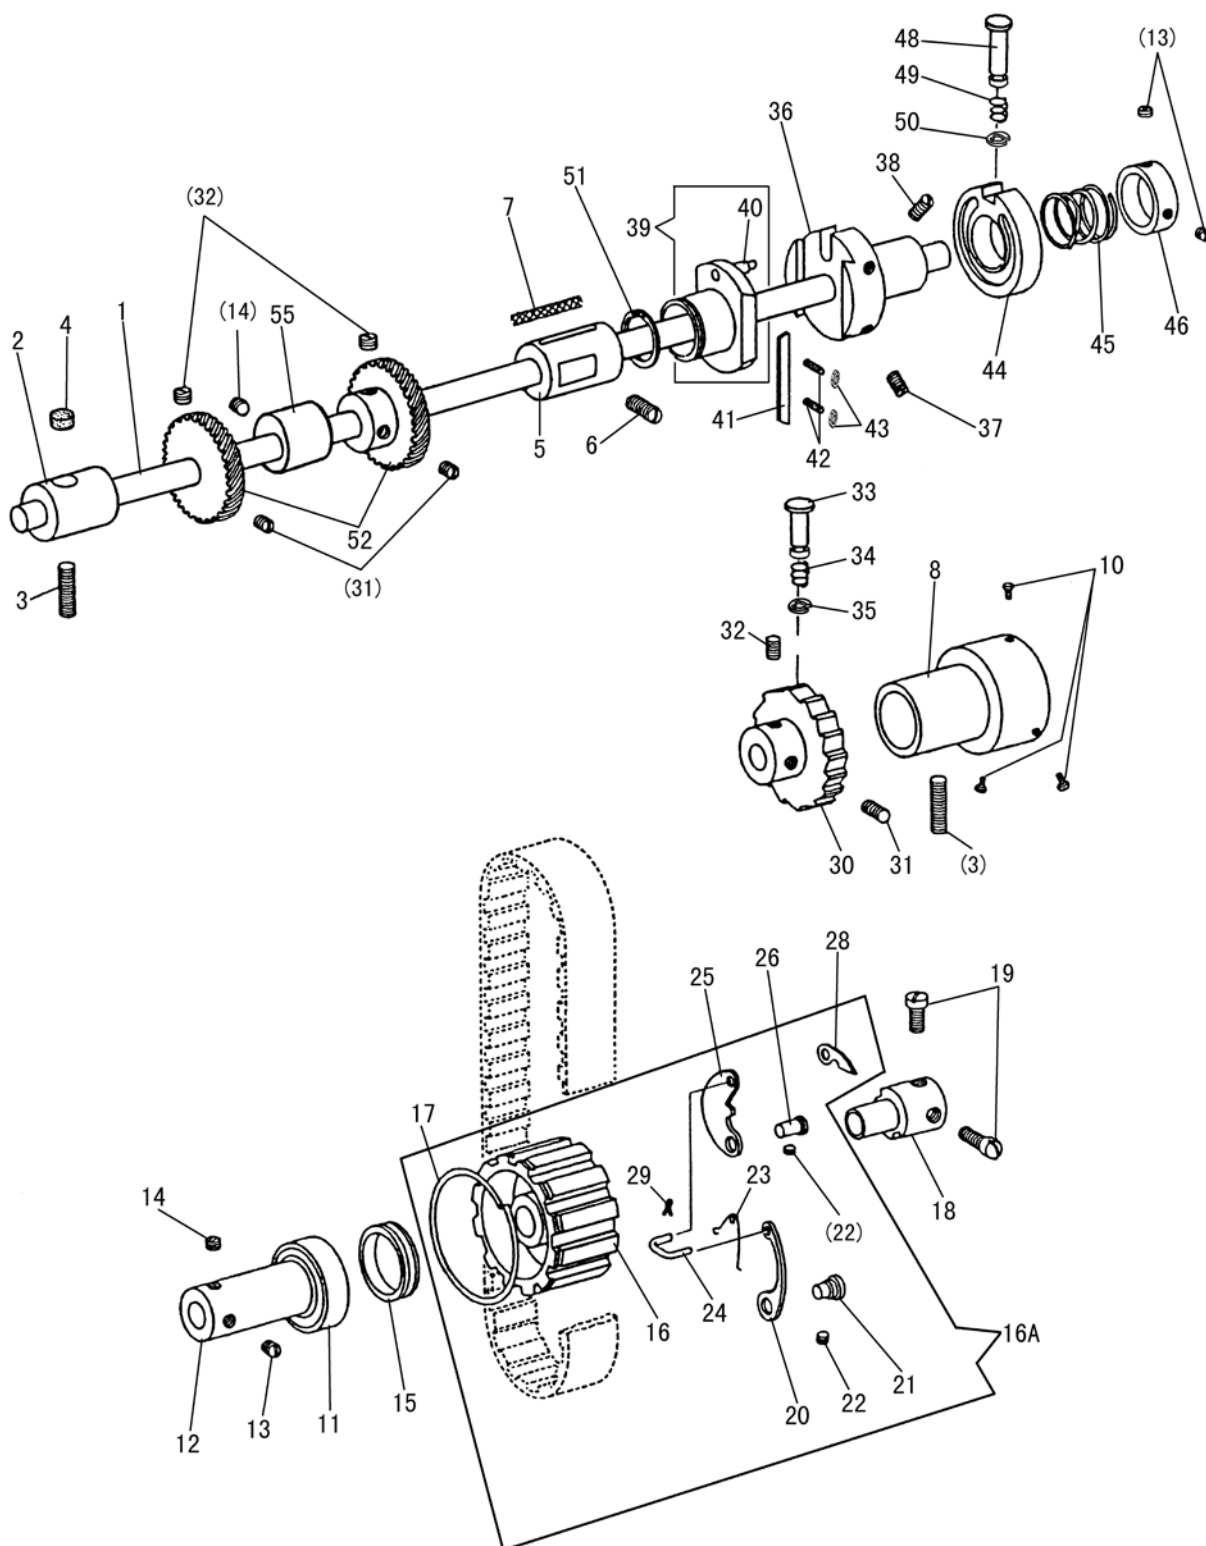


F. 下轴、送料部件

序号	图 号	名 称	件数	备 注
F01	HE004G8001	下轴	1	
F02	HE005G8001	下轴（左）轴套 1/16--1	1	
F03	HE020C8001	上轴轴承座紧定螺钉	2	SM17/64 (6.75) (24) × 20
F04	HE007G8001	下轴（前）轴套 羊毛毡	1	
F05	HE008G8001	下轴（中）轴套1/16--1	1	
F06	HE009G8001	下轴(中)轴套紧定螺钉	1	SM17/64 (24) × 14
F07	HE010G8001	下轴中轴套油线	1	
F08	HE011G8001	下轴轴承座	1	
F10	HE013G8001	下轴轴承挡圈螺钉	3	SM0. 1339 (36) × 5
F11	HE016C8001	上轴轴承	1	6202Z (15 × 35 × 11)
F12	HE015G8001	下轴轴套(右)	1	
F13	HE023C8001	标环螺钉	3	SM1/4 (32) × 5. 5
F14	HE017G8001	小齿轮定位螺钉	2	SM1/4 (32) × 5. 5
F15	HE018G8001	轴承挡圈	1	
F16	HE019G8001	同步带轮（下）	1	进口
F17	H3205C0661	弹簧挡圈	1	
F18	HE021G8001	同步带轮轴	1	
F19	HE022G8001	螺钉	2	SM1/4 (32) × 10. 5
F20	HE023G8001	长连杆	1	
F21	HE024G8001	长连杆销	1	
F22	HE028E8001	摆动架滑块轴螺钉	2	SM7/32 (32) × 7
F23	HE026G8001	同步带轮弹簧	1	
F24	HE027G8001	连杆销	1	
F25	H4719D8001	短连杆	1	
F26	HE029G8001	短连杆销	1	
F28	HE031G8001	同步带轮连杆	1	
F29	H601012080	开口销	1	
F30	HE033G8001	复位棘轮	1	
F31	HE034G8001	大齿轮紧定螺钉	3	SM1/4 (32) × 7
F32	HE035G8001	大齿轮定位螺钉	3	SM1/4 (32) × 8
F33	HE036G8001	复位按钮	1	镀铬
F34	H4107D0672	安全离合器弹簧	1	
F35	H007013050	开口挡圈	1	
F36	HE039G8001	送布凸轮座	1	
F37	HE040G8001	送布凸轮座螺钉	1	SM1/4 (32) × 11
F38	HE041G8001	送布凸轮座定位螺钉	1	SM1/4 (32) × 12
F39	HE042G8001	送布凸轮	1	
F40	HE043G8001	送布凸轮偏心销	1	
F41	HE044G8001	送布凸轮调节片	1	
F42	HE045G8001	垫片紧定螺钉	2	SM1/8 (44) × 7. 5
F43	H7258B8001	小压线器螺母	2	SM1/8 (44)
F44	HE047G8001	偏心轮	1	
F45	HE048G8001	弹簧	1	
F46	HE049G8001	弹簧紧圈	1	
F48	HE051G8001	针距调节按钮	1	镀铬

F. 下轴、送料部件

序号	图 号	名 称	件数	备 注
F49	H4107D0672	安全离合器弹簧	1	
F50	H007013050	开口挡圈	1	
F51	H007009250	轴用弹性挡圈	1	
F52	HE055G8001	大齿轮	2	
F55	HE058G8001	拾牙凸轮	1	


G. 针板、送布轴部件

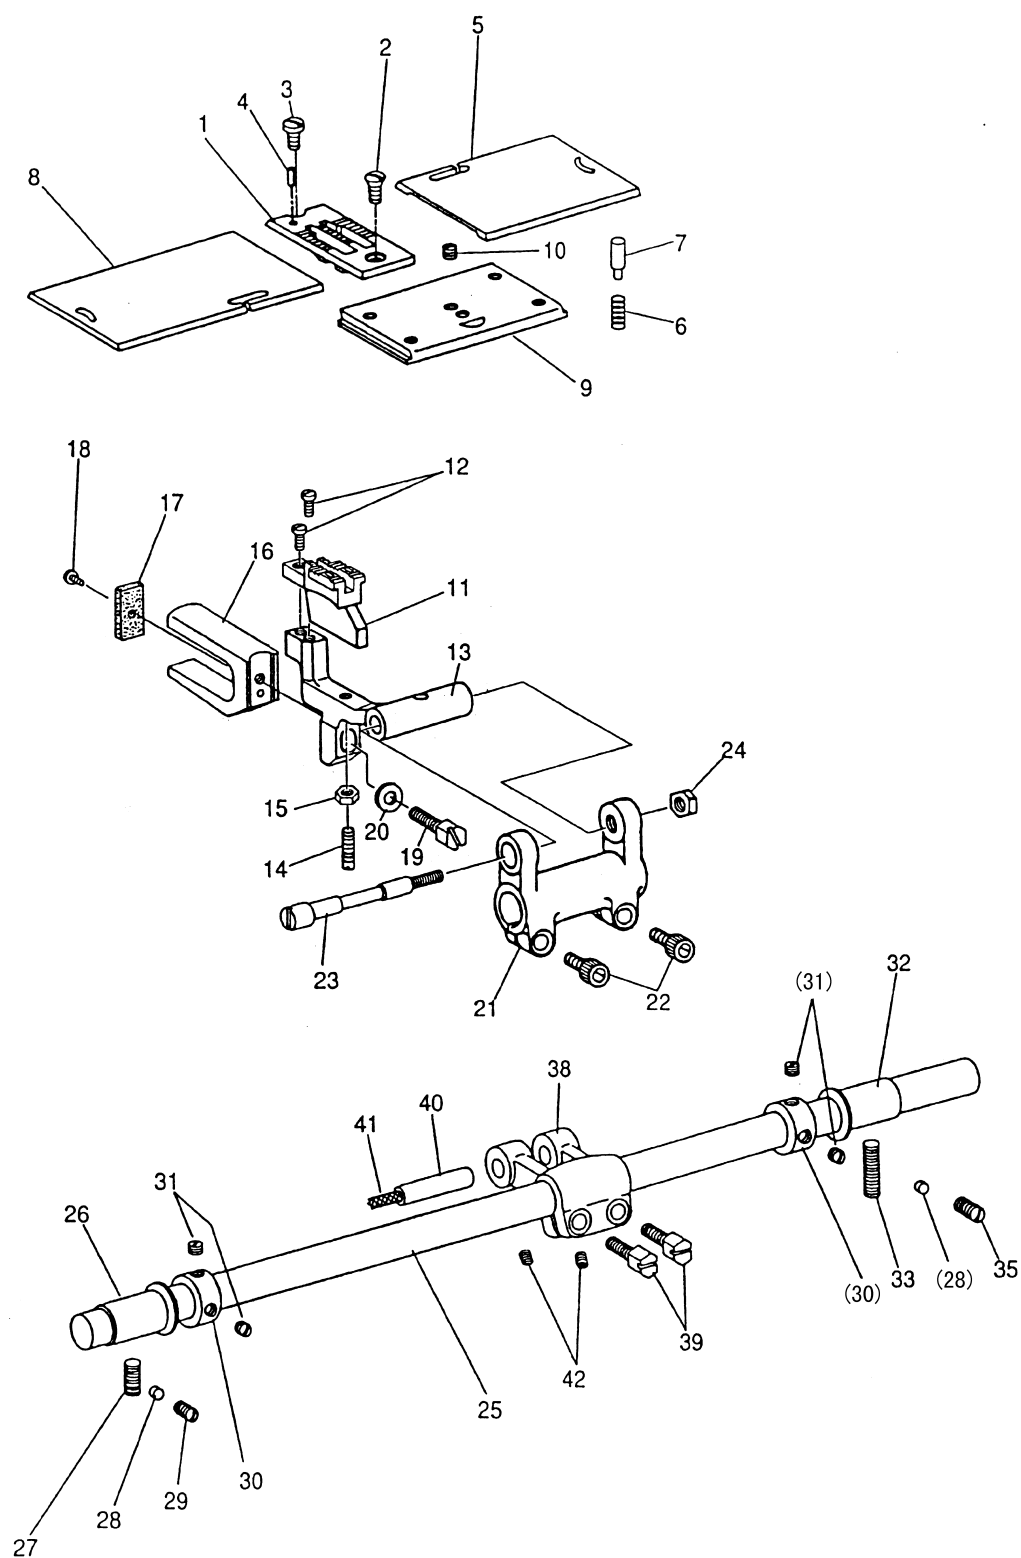

G. 针板、送布轴部件

序号	图 号	名 称	件数	备 注
G01	HE004H8001	针板(1/4)	1	标准
G02	HE005H8001	针板螺钉	1	SM11/64(40)×9
G03	HE006H8001	针板定位螺钉	1	SM0.1339(36)×5.4
G04	H3200B2130	针板定位销	1	
G05	HE008H8001	推板(右) 1/4--3/8	1	
G06	HE009H8001	弹簧	1	
G07	HE010H8001	推板销	1	
G08	HE011H8001	推板(左) 3/16--1/4	1	
G09	HE048H8001	推板(前)组件	1	
G10	HE013H8001	推板螺钉	1	SM13/64(32)×4.3
G11	HE014H8001	送布牙1/4	1	
G12	HE015H8001	送布牙螺钉	2	SM1/8(40)×7
G13	HE016H8001	牙架	1	
G14	HE017H8001	紧定螺钉	1	SM1/8(40)×12.5
G15	HE018H8001	六角螺母	1	SM1/8(40)×2.5
G16	HE019H8001	抬牙曲柄牙叉	1	
G17	HE020H8001	羊毛毡	1	
G18	HE025B8001	螺钉	1	SM1/8(40)×3.3
G19	HE022H8001	六角螺钉	1	SM7/32(32)×15
G20	H2013J0065	垫圈	1	
G21	HE024H8001	牙架曲柄	1	
G22	H415050140	内六角圆柱头螺钉	2	发黑
G23	HE026H8001	牙架曲柄轴	1	
G24	HE027H8001	六角螺母	1	SM1/4(28)
G25	HE028H8001	送布轴	1	
G26	HE029H8001	送布轴轴套(左)	1	
G27	HE009G8001	螺钉	1	SM17/64(24)×14
G28	HE031H8001	衬垫	2	
G29	HE006D8001	螺钉	1	SM17/64(24)×11
G30	HE033H8001	紧圈(前)	2	
G31	HE034H8001	螺钉	4	SM17/64(24)×4.5
G32	HE035H8001	送布轴轴套(右)	1	
G33	HE020C8001	上轴轴承座紧定螺钉	1	SM17/64(24)×20
G35	HE007E8001	针杆摆动架紧定螺钉	1	SM17/64(24)×9
G38	HE041H8001	送布曲柄	1	
G39	H3115F0671	调节曲柄螺钉	2	SM1/4(28)×16
G40	HE043H8001	送布轴曲柄销	1	
G41	HE044H8001	油绳	1	
G42	HE045H8001	螺钉	2	SM7/32(32)×5.5


H. 倒缝部件

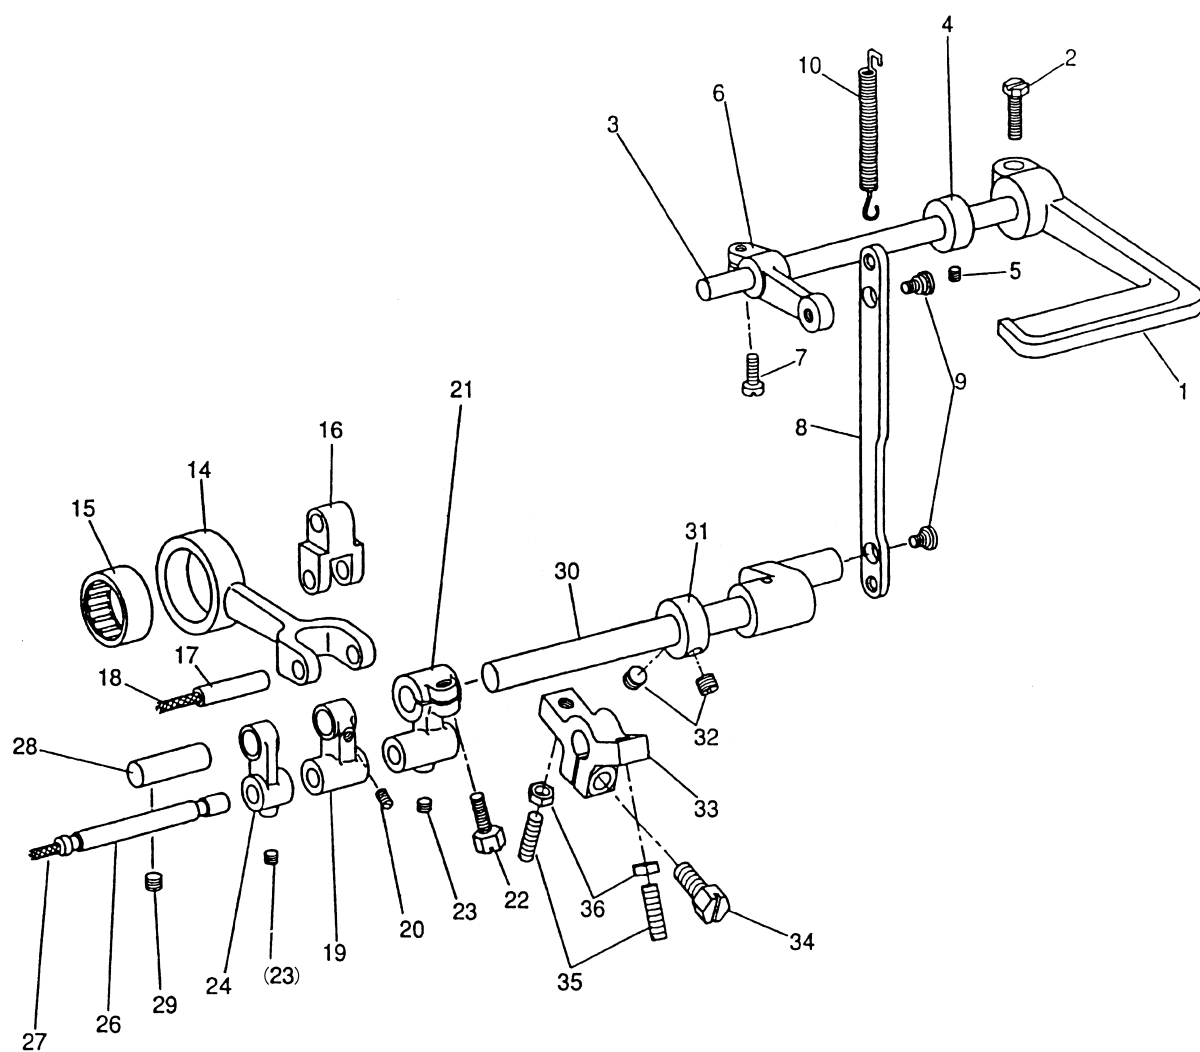

H. 倒缝部件

序号	图 号	名 称	件数	备 注
H01	HE004I8001	倒缝操纵扳手	1	
H02	HE005I8001	倒缝操纵扳手螺钉	1	SM15/64(28)×18
H03	HE006I8001	倒缝操纵杆	1	
H04	HE007I8001	倒缝操纵杆挡圈	1	
H05	HE029B8001	螺钉	1	SM15/64(28)×7.5
H06	HE009I8001	倒缝曲柄	1	
H07	HE010I8001	倒缝曲柄螺钉	1	SM15/64(28)×16
H08	HE011I8001	倒缝曲柄连杆	1	
H09	HE005F8001	膝控提升杠杆螺钉	2	SM17/64(6.75)(24)
H10	HE013I8001	倒缝曲柄弹簧	1	
H14	HE014I8001	送布凸轮连杆	1	
H15	HE049C8001	轴承	1	
H16	HE016I8001	连杆	1	
H17	HE017I8001	铰链销	1	
H18	HE027I8001	油绳	1	
H19	HE019I8001	曲柄连杆	1	
H20	HE045H8001	螺钉	1	SM7/32(32)×5.5
H21	HE021I8001	针距调节曲柄	1	
H22	H3115F0671	调节曲柄螺钉	1	SM1/4(28)×16
H23	HE045H8001	螺钉	2	SM7/32(32)×5.5
H24	HE024I8001	针距调节连杆	1	
H26	HE026I8001	针距调节曲柄转轴	1	
H27	HE044H8001	油绳	1	
H28	HE028I8001	针距调节连杆销	1	
H29	HE034G8001	大齿轮紧定螺钉	1	SM1/4(32)×7
H30	HE030I8001	倒缝曲柄轴	1	
H31	HE031I8001	倒缝曲柄轴挡圈	1	
H32	HE023C8001	标环螺钉	2	SM1/4(32)×5.5
H33	HE033I8001	限位曲柄	1	
H34	H3115F0671	调节曲柄螺钉	1	SM1/4(28)×16
H35	H426050180	开槽锥端紧定螺钉	2	发黑
H36	H003001050	六角螺母	2	发黑


I. 旋梭部件(右)

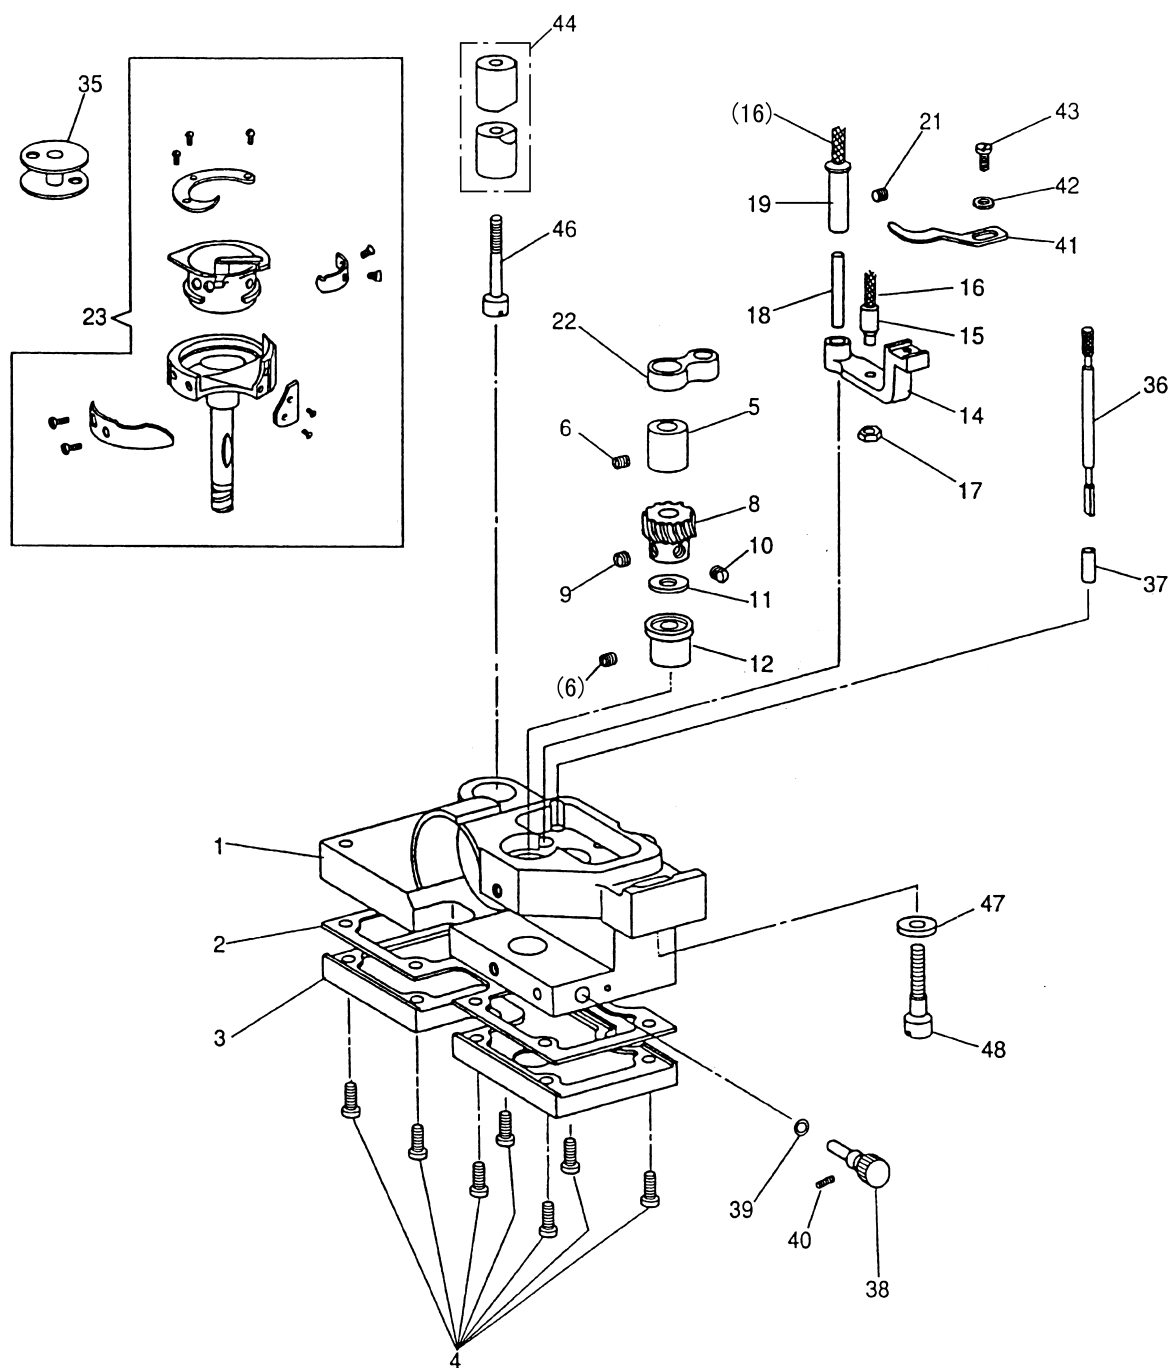

I. 旋梭部件(右)

序号	图 号	名 称	件数	备 注
I01	HE004J8001	旋梭台（右）	1	
I02	HE005J8001	密封垫	1	
I03	HE006J8001	盛油盘（右）	1	
I04	HE017B8001	上盖板螺钉	7	SM9/64(40)×10
I05	HE008J8001	上衬套	1	
I06	HE009J8001	衬套紧定螺钉	2	SM7/32(32)×11
I08	HE010J8001	小齿轮	1	
I09	HE017G8001	小齿轮定位螺钉	1	SM1/4(32)×5.5
I10	HE012J8001	小齿轮紧定螺钉	1	SM1/4(32)×4.5
I11	HE013J8001	垫圈	1	
I12	HE014J8001	下衬套	1	
I14	HE016J8001	拨线勾支架	1	
I15	HE017J8001	定位销	1	
I16	HE018J8001	羊毛毡	2	
I17	HE019J8001	螺母	1	SM11/64(40)
I18	HE020J8001	拨线勾支架轴管	1	
I19	HE021J8001	拨线勾支架轴	1	
I21	HE053C8001	螺钉	1	SM7/32(32)×11
I22	HE024J8001	支架连杆	1	
I23	HB82J51072	旋梭组件	1	康秀提供
I35	HE037J8001	梭心	1	
I36	HE038J8001	油测量棒	1	
I37	HE039J8001	导油管	1	
I38	HE040J8001	油量调节螺钉	1	
I39	HE041J8001	O型垫圈	1	
I40	HE042J8001	螺钉	1	SM1/8(40)×8
I41	HE043J8001	旋梭拨线勾	1	
I42	HE044J8001	垫圈	1	
I43	HE046C8001	档油板螺钉	1	SM0.1339(36)×6
I44	HE046J8001	轴套锁紧块	1	
I46	HE048J8001	螺钉	1	SM7/32(32)×32
I47	HE049J8001	垫圈	1	
I48	HE050J8001	螺钉	1	SM17/64(24)×28


J. 旋梭部件（左）

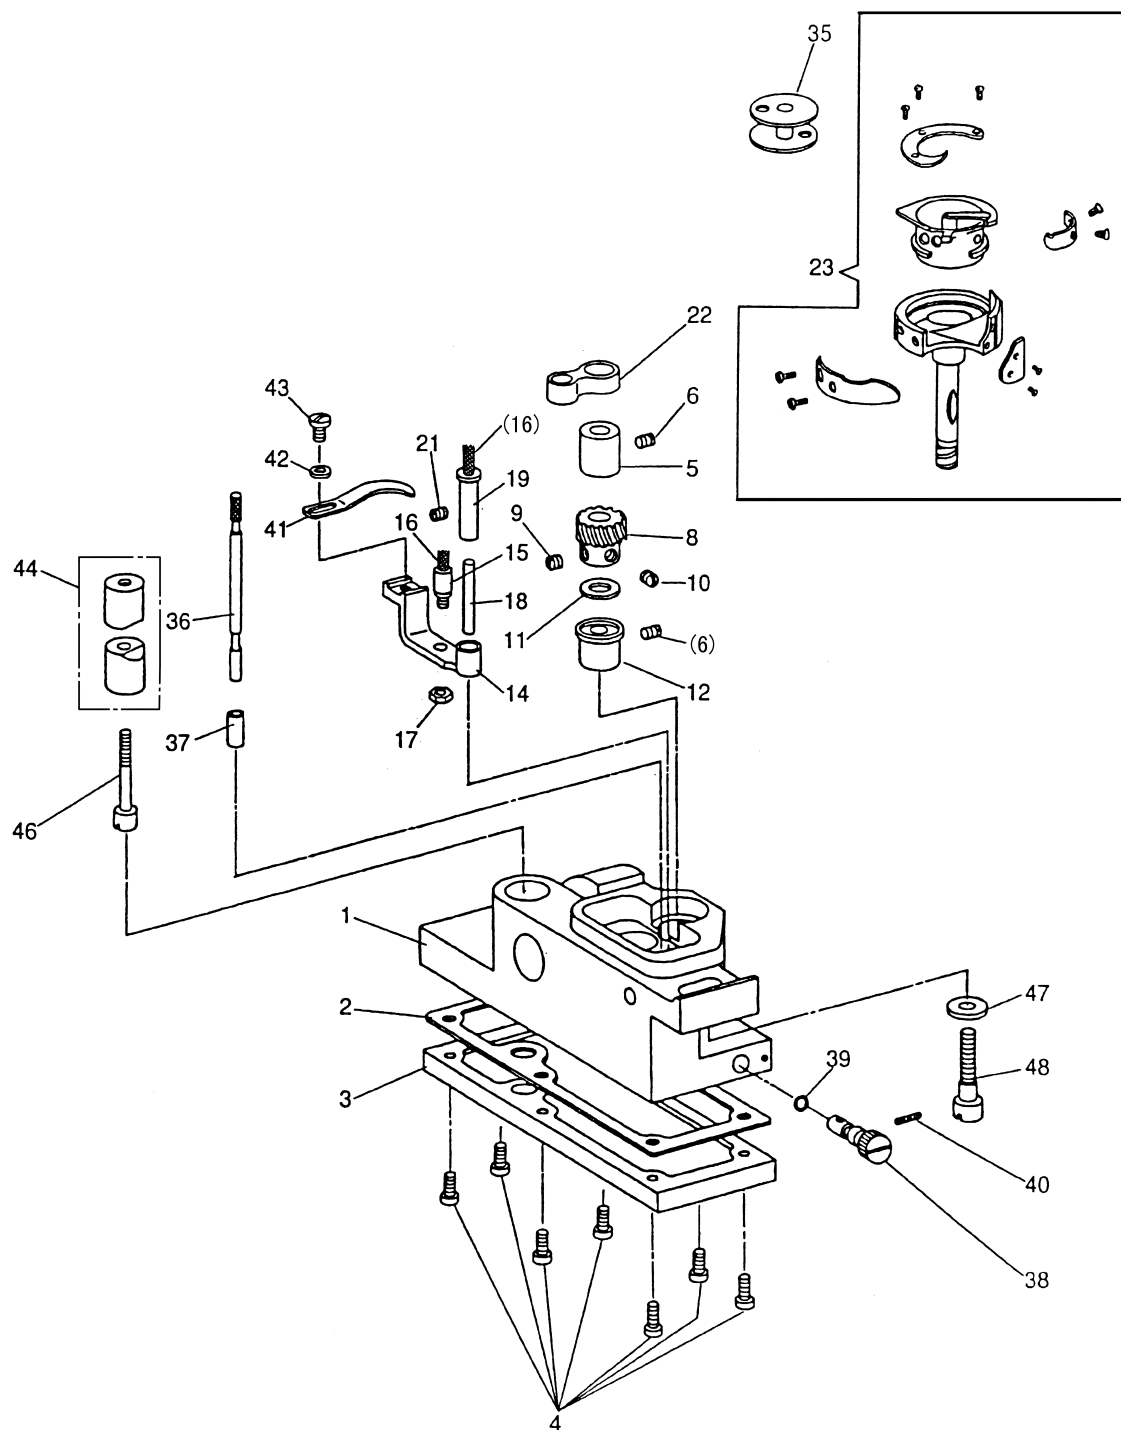

J. 旋梭部件（左）

序号	图 号	名 称	件数	备 注
J01	HE051J8001	旋梭台（左）	1	
J02	HE005J8001	密封垫	1	
J03	HE052J8001	旋梭台盖板（左）	1	
J04	HE017B8001	上盖板螺钉	7	SM9/64(40)×10
J05	HE008J8001	上衬套	1	
J06	HE009J8001	衬套紧定螺钉	2	SM7/32(32)×11
J08	HE010J8001	小齿轮	1	
J09	HE017G8001	小齿轮定位螺钉	1	SM1/4(32)×5.5
J10	HE012J8001	小齿轮紧定螺钉	1	SM1/4(32)×4.5
J11	HE013J8001	垫圈	1	
J12	HE014J8001	下衬套	1	
J14	HE016J8001	拨线勾支架	1	
J15	HE017J8001	定位销	1	
J16	HE018J8001	羊毛毡	2	
J17	HE019J8001	螺母	1	SM11/64(40)
J18	HE020J8001	拨线勾支架轴管	1	
J19	HE021J8001	拨线勾支架轴	1	
J21	HE053C8001	螺钉	1	SM7/32(32)×11
J22	HE024J8001	支架连杆	1	
J23	HB82J51072	旋梭组件	1	康秀提供
J35	HE037J8001	梭心	1	
J36	HE038J8001	油测量棒	1	
J37	HE039J8001	导油管	1	
J38	HE040J8001	油量调节螺钉	1	
J39	HE041J8001	O型垫圈	1	
J40	HE042J8001	螺钉	1	SM1/8(40)×8
J41	HE043J8001	旋梭拨线勾	1	
J42	HE044J8001	垫圈	1	
J43	HE046C8001	档油板螺钉	1	SM0.1339(36)×6
J44	HE046J8001	轴套锁紧块	1	
J46	HE048J8001	螺钉	1	SM7/32(32)×32
J47	HE049J8001	垫圈	1	
J48	HE050J8001	螺钉	1	SM17/64(24)×28

K. 夹线部件

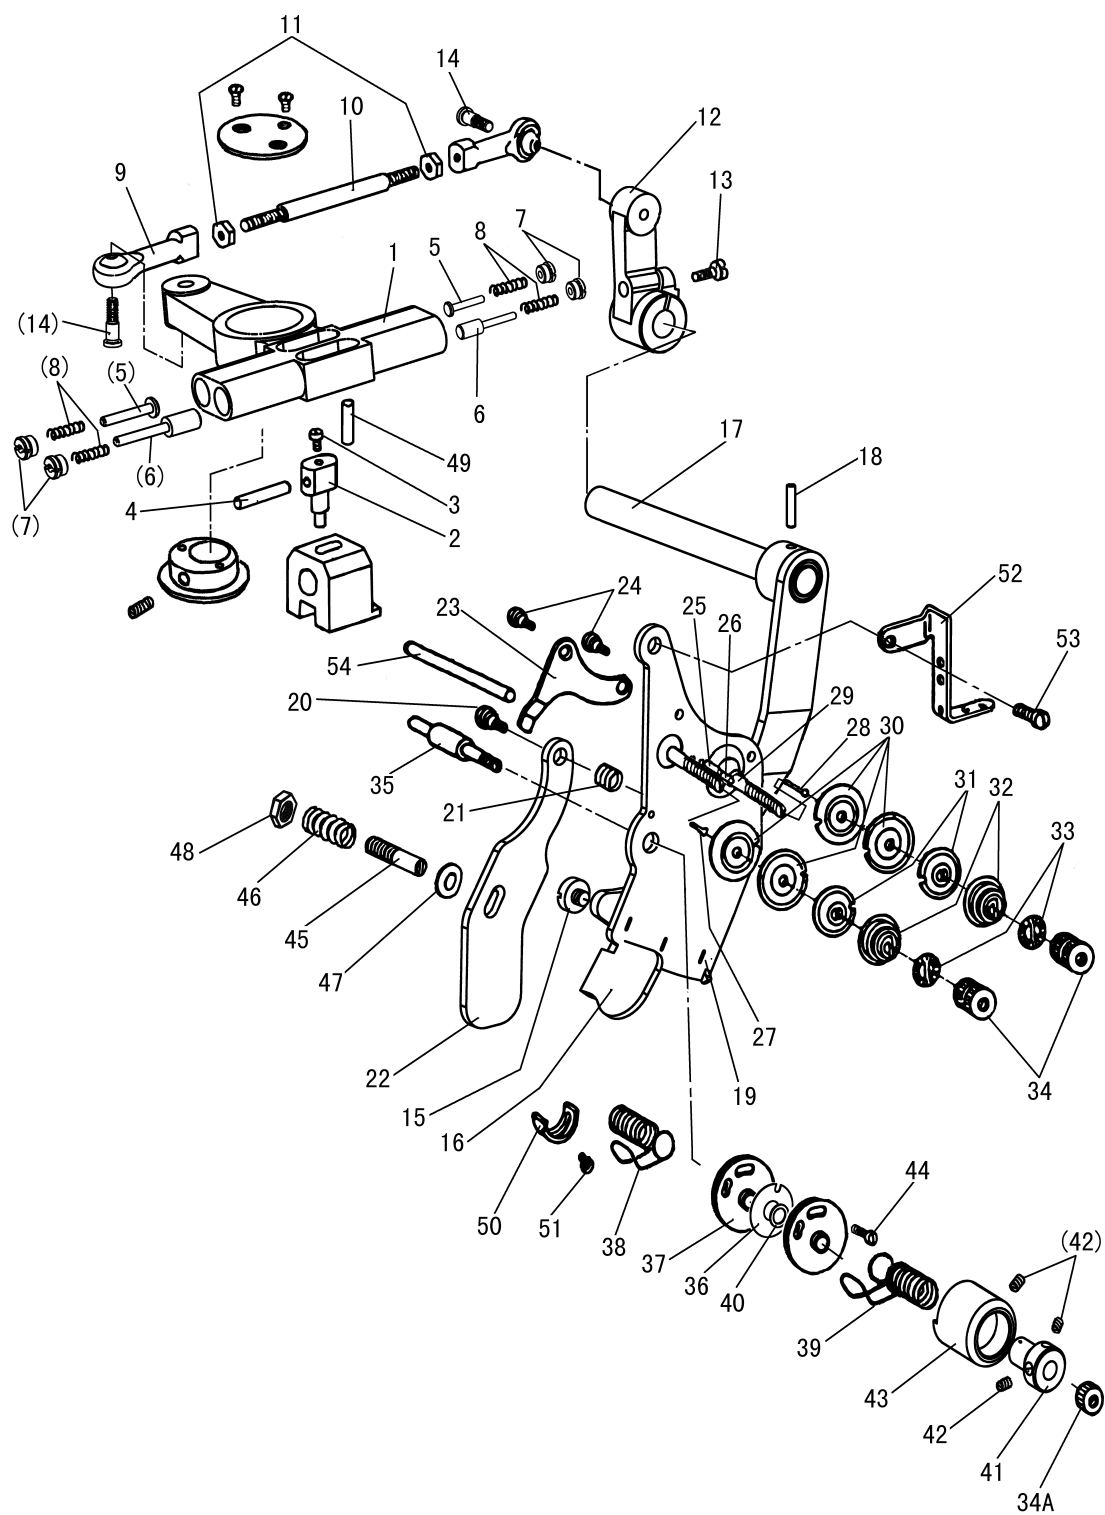


K. 夹线部件

序号	图 号	名 称	件数	备 注
K01	HE505K8001	导向台	1	SM9/64*40
K02	HE506K8001	导向销	1	
K03	HA7311CC06	偏心连杆轴螺钉	1	
K04	H3404D0653	销	1	
K05	H3404D0654	销钉	2	
K06	H3404D0655	特殊销钉	2	
K07	H3404D0656	特殊螺钉	4	
K08	H3404D0658	弹簧	4	
K09	H3405D0663	连杆	2	
K10	HE512K8001	双头螺杆	1	
K11	H3405D0662	螺母	2	M6×1(原39H3-007F2)
K12	HE511K8001	连杆曲柄	1	
K13	HE535K8001	连杆曲柄螺钉	1	
K14	H3400D2030	销螺钉	2	
K15	HE514K8001	控制杆螺钉	1	
K16	HE515K8001	针杆位置控制杆	1	
K17	HE517K8001	轴	1	
K18	H609030180	弹性圆柱销	1	
K19	HE519K8001	针杆位置标板	1	
K20	HE520K8001	阶梯螺钉	1	SM1/4(40)
K21	HE521K8001	弹簧	1	
K22	HE522K8001	针杆变换杠杆	1	
K23	H3221B3142	松线压板	1	
K24	H2504C6510	松线压板螺钉	2	
K25	H605020090	圆柱销	1	
K26	H605020140	圆柱销	1	
K27	HE006K8001	短松线钉	1	
K28	HE007K8001	长松线钉	1	
K29	HE008K8001	夹线螺钉	2	
K30	H2504C0656	夹线板	4	SM3/32(56)×13.2
K31	H2504C0657	松线板	2	
K32	H4710C8001	夹线弹簧	2	
K33	HA115B7010	夹线螺母止动板	2	
K34	HE012K8001	夹线螺母	2	
K34A	HE017K8001	螺母	1	
K35	HE523K8001	阶梯螺钉	1	
K36	HE524K8001	过线定位板	1	
K37	HE015K7101	过线板组件	2	
K38	HE525K8001	挑线簧	1	
K39	HE526K8001	挑线簧	1	SM3/32(56)×13.2
K40	HE527K8001	垫圈	1	
K41	HE528K8001	挺线簧套筒	1	
K42	H6039G8001	套筒螺钉	3	
K43	HE529K8001	套筒	1	
K44	HE530K8001	过线板螺钉	1	

K. 夹线部件

序号	图 号	名 称	件数	备 注
K45	HE531K8001	变换杠杆限位螺钉	1	$\phi 5 \times 20$ SM11/64(32) × 9
K46	HE532K8001	变换杠杆限位弹簧	1	
K47	HE121B8001	垫圈	1	
K48	HE533K8001	螺母	1	
K49	HE534K8001	导向台限位销	1	
K50	H3221B6819	止动块	1	
K51	HE046C8001	档油板螺钉	1	
K52	HE021K8001	三眼线勾	1	
K53	HE022K8001	螺钉	1	
K54	HE023K8001	挺线销	1	


L. 供油部件

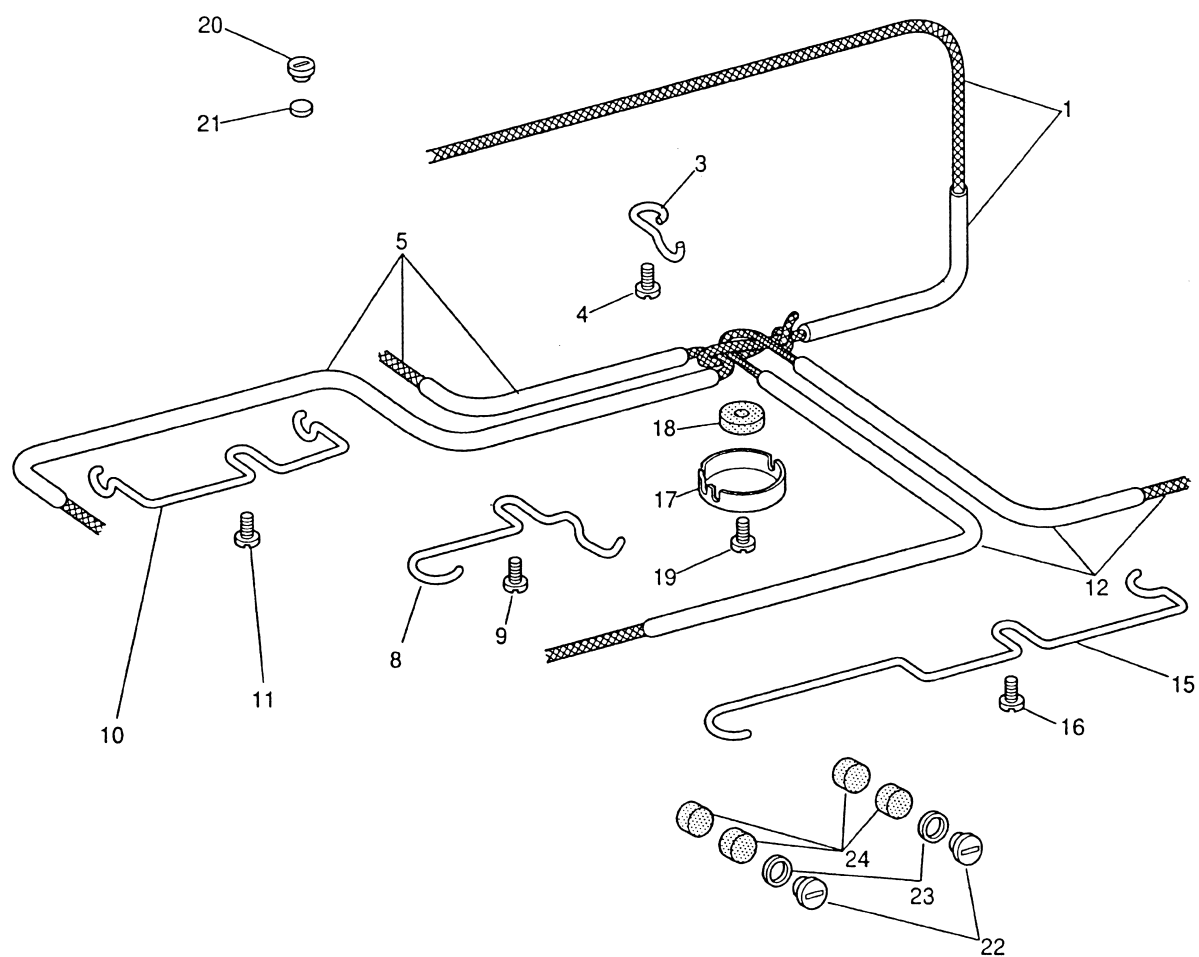

L. 供油部件


序号	图 号	名 称	件数	备 注
L01	HE004L7101	油管组件	1	
L03	HE005L8001	油管夹 (A)	1	
L04	HE006L8001	螺钉	4	SM9/64 (40) × 6.5
L05	HE007L7101	油管组件	1	装配组件
L08	HE008L8001	油管夹 (B)	1	
L10	HE009L8001	油管夹 (C)	1	
L12	HE010L7101	油管组件	1	装配组件
L15	HE011L8001	油管夹 (D)	1	
L17	HE012L8001	油管盖	1	发黑
L18	HE013L8001	羊毛毡	1	
L19	HE014L8001	螺钉	1	SM1/4 (32) × 13
L20	HE015L8001	下轴轴套封油钉	1	SM7/16 (28)
L21	HE016L8001	羊毛毡	5	
L22	HE017L8001	送布轴轴套封油钉	2	SM7/16 (28)
L23	HE018L8001	密封圈	1	

M. 附件

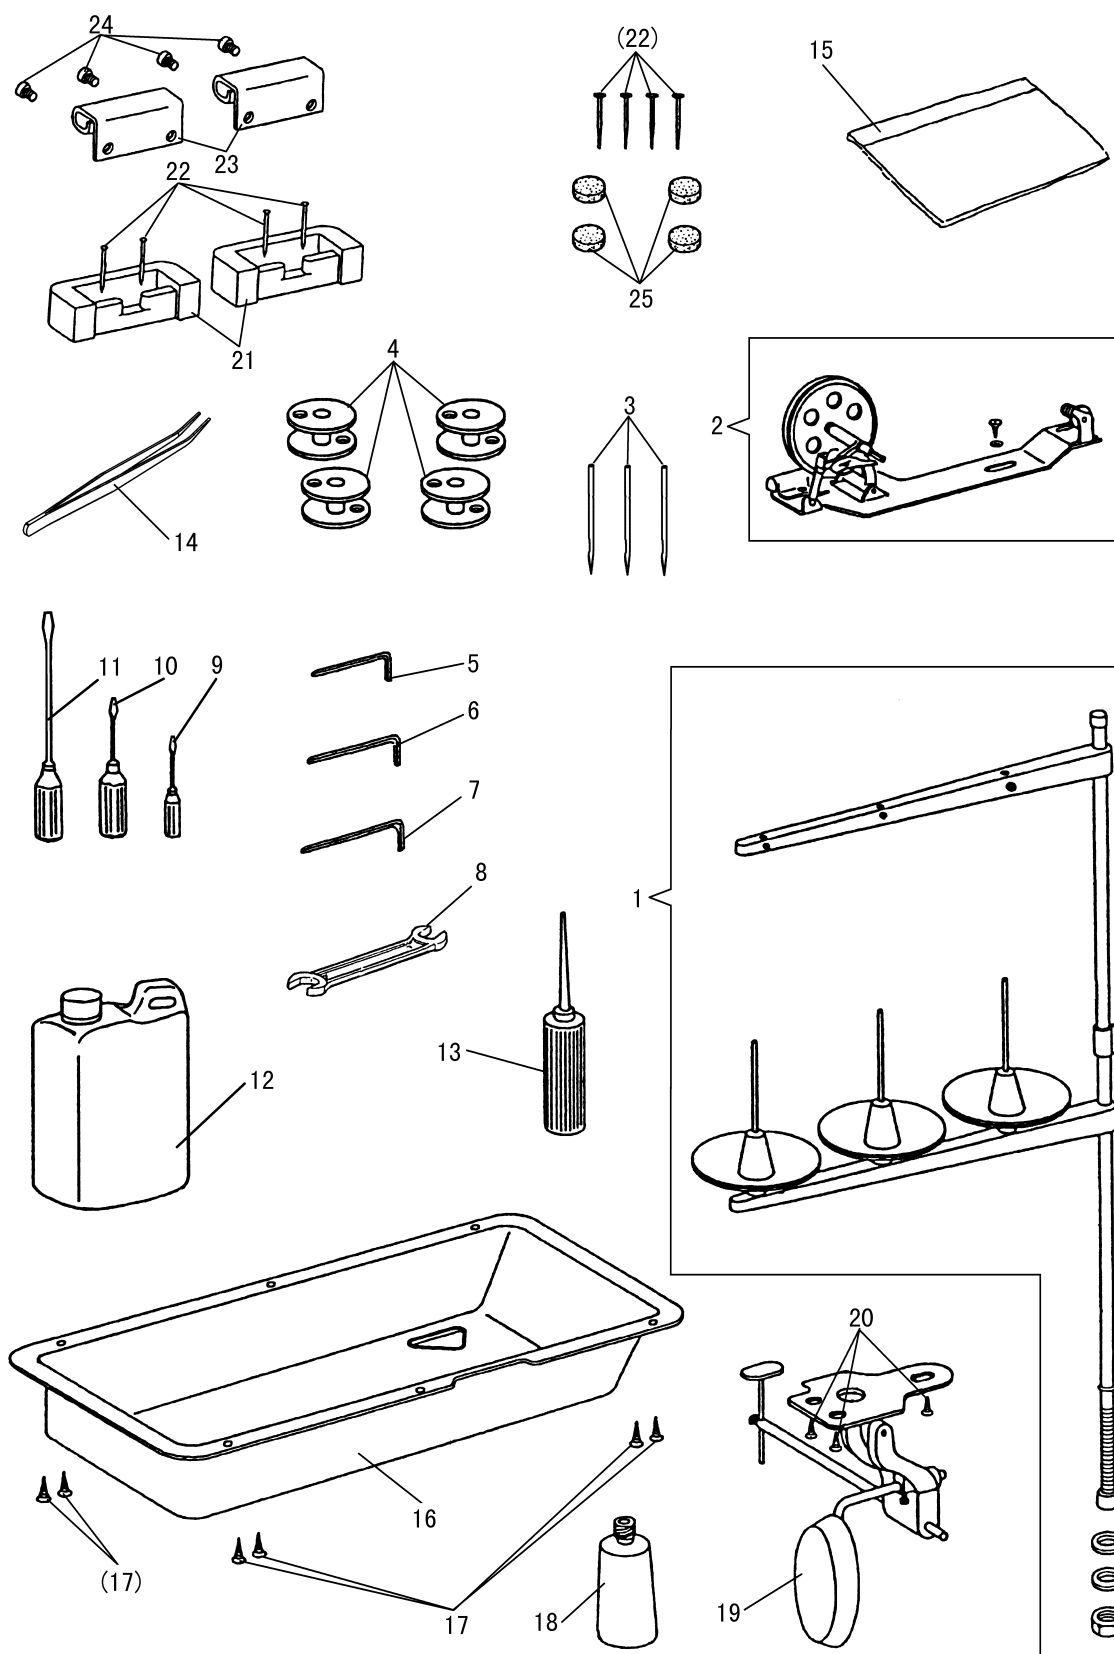

M. 附件

序号	图 号	名 称	件数	备 注
M01	H3200L0120	线架组件(3线)	1	
M02	HA905S0066	绕线器组件	1	
M03		机针DP×17 #22 (六根一包)	1	DP×17 #22
M04	HE037J8001	梭心	6	进口件
M05	HB00001015	内六角扳手	1	S689N902P01
M06	HB00001030	内六角扳手	1	S689N902P04
M07	HB00001025	内六角扳手	1	S689N902P03
M08	HA300J2220	双头扳手	1	10×14
M09	HA300J2210	螺钉起子(小)	1	
M10	HA300J2200	螺钉起子(中)	1	
M11	HA300J2070	螺钉起子(大)	1	
M12	HA300J2170	油壶	1	
M13	HA100J2110	小油壶	1	
M14	HE015M8001	镊子	1	
M15	HA300J2150	自封式附件袋	1	通用LS2-1130
M16	HE011M7101	盛油盘	1	
M17	H802035190	开槽沉头木螺钉	6	Φ3.5x19(总长)
M18	HE013M8001	油瓶	1	
M19	HE014M7101	膝控提升组件	1	设计组件
M20	H802055250	开槽沉头木螺钉	3	
M21	HE007M8001	垫块	2	
M22	HZB1016250	圆钉	8	
M23	HE009M8001	铰链	2	
M24	HE010M8001	螺钉	4	SM17/64(24)×7.5
M25	HE005M8001	防震垫块	4	

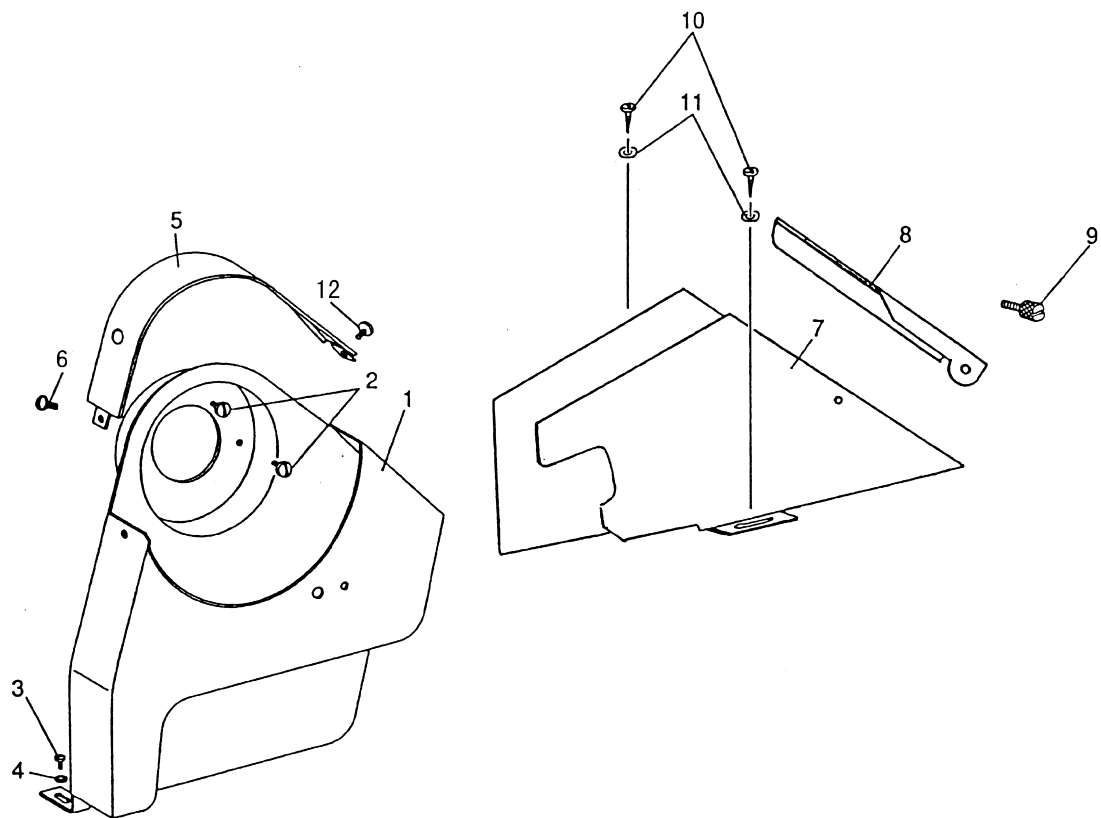

N. 皮带罩

序号	图 号	名 称	件数	备 注
N01	HE005N8001	皮带罩(左)	1	
N02	HE006H8001	针板定位螺钉	2	SM0.1339(36)×5.4
N03	HE046C8001	挡油板螺钉	1	SM0.1339(36)×6
N04	H005001040	平垫圈	1	镀镍
N05	HE008N8001	皮带罩(上)	1	
N06	HE009N8001	螺钉	1	SM13/64(32)×9
N07	HE010N8001	皮带罩(下)	1	特殊订货
N08	HE011N8001	小皮带罩(下)	1	特殊订货
N09	HE012N8001	螺钉	1	无实物 SM9/64(40), 无图
N10	H801045200	开槽圆头木螺钉	2	
N11	HA300J2230	木螺丝垫圈	2	
N12	HE122I8001	皮带罩(上)螺钉	1	